


Fotospeed

Tubeless **InkFlow**

For the **Epson R2400**



All NEW Tubeless InkFlow System for the Epson R2400 Printer.

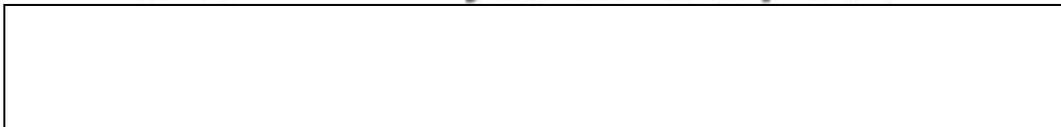

For any assistance phone 01249714555 or email tech@fotospeed.com

www.fotospeed.com

Contents

Introduction.....	Page 3
Box contents.....	Page 3
Preparing the Printer.....	Page 4
Preparing your Cartridges.....	Pages 4-5
Installing your Cartridges.....	Pages 5-6
Resetting your Cartridges.....	Page 6

INSTALLATION INSTRUCTIONS AND USER GUIDE

Thank you for purchasing one of our Fotospeed ink systems. You have just taken the first step to enjoying the cost saving and superior performance benefits of using Fotospeed Dye Ink. Our refill systems are simple to set up, easy to fill and will provide you with many years of trouble free printing and significant savings. Please follow these instructions thoroughly and to familiarise yourself with the supplied components before you begin to install your **Fotospeed R2400 Tubeless InkFlow** system. You must remember that you will now be in contact with our bulk ink as opposed to sealed cartridges that you may be used to. **During installation, be aware that if ink is spilled it can stain your work surface. Have a roll of paper handy as accidents are always possible!!!**



What you should find in your box.

- 8 X Refillable Cartridges with Fotospeed Resettable Chips
- 8 X Refilling Syringes with metal probes
- 8 x 100ml Fotospeed Pigment Inks.
(Equivalent to 9 sets of genuine cartridges)
- Instruction sheet.
- 1 x Priming Syringe


What you will need

- A covered work surface in case of any spillages
- Some kitchen roll
- A cup of water to put to place your syringes in when you have finished filling the cartridges

Preparing the printer

STEP 1

Before starting the installation, using your existing inks, make sure you have a perfect nozzle check. The utility for producing a nozzle check can be located under “Maintenance” or “Utilities” tab of the Epson print driver software supplied with your printer. A good nozzle check should look like this:-

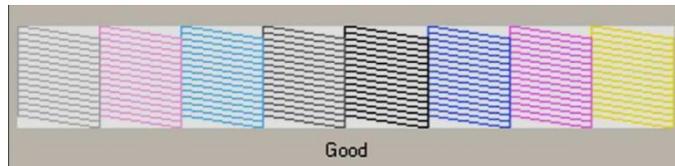

STEP 2

Open your Epson R2400 cartridge lid to reveal the Genuine Epson cartridge chamber. See picture 1.




Preparing your Fotospeed Cartridges

STEP 3

Your cartridges are now ready to be filled with the Fotospeed pigment inks from the supplied bottles. **Be aware that if ink is spilled it can stain your work surface. Put down a black bag or some kitchen roll and use that on top of your work surface.**


To begin with, remove the clear rubber bung and throw away (green arrow) and coloured bung (red arrow) from the top of the cartridge to reveal the filling hole – see picture 2.

You can now fill the cartridge with ink through the filling hole.

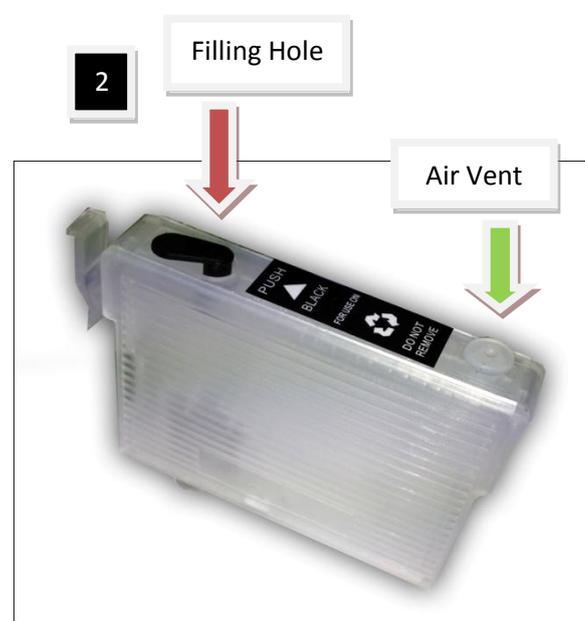

STEP 4

- Now that you have taken out the coloured rubber bung, you can fill the cartridge. (Get yourself some kitchen roll as in **picture 4**, just in case any bubbles are created).
- Take your syringe with the metal probe. Insert this into your first bottle of ink; in this case the Black. Suck up and fill the syringe with ink.
- Now insert the metal probe into the filling hole. – **see picture 3-4**
- Push down the plunger to fill cartridge as in **picture 4**. This may take 1 syringe full to fill cartridge. Now put the coloured bung back in the filling hole.
- Once you have completed this, you can now prime the cartridge. First of all, pierce the underside of the cartridge by inserting it into the cartridge chamber. Once pierced, remove the cartridge.
- You can now insert the priming syringe into the bottom of the cartridge. Keep it upright and pull back the plunger. When you see ink appearing within the syringe stop pulling- **see picture 5**
- Now repeat the process of filling with the remaining 7/8 cartridges.

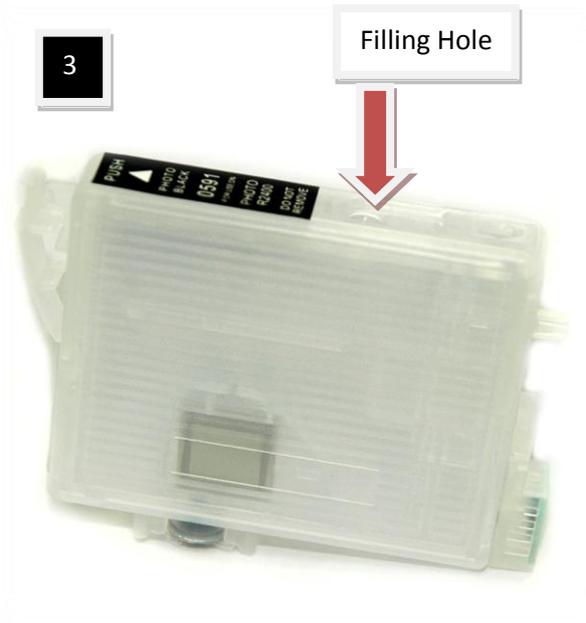

4



5




STEP 5

Once you have completed the above, insert the cartridges you have been working on into the correct slot within your printer.

STEP 6

Once you have changed all the cartridges over you should now do 2 head cleans to make sure there is a smooth transition from Epson K3 inks to our Fotospeed DYE Inks.

As in **STEP 1** you should now do a nozzle check to make sure all colours are coming through. Once you are happy with a perfect nozzle check you can begin to enjoy the large saving that our ink system can offer you.

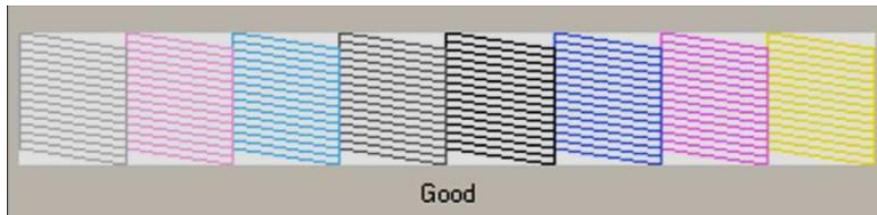

HOW TO REFILL CARTRIDGES AND RESET THE CHIPS

When the red light appears on the printer and the status monitor prompts you that your cartridge or cartridges are empty, lift out the cartridge and refill using the correctly marked colour and supplied syringe (**see step 4**). Once you have done this, re-insert the cartridge back into the printer, this action will reset the chip back to full.